

SeIRO[®] MPS-34 - pH Stable Membrane

Nanofiltration Spiral Module Series – 2540, 4040

PRODUCT DESCRIPTION

Membrane Chemistry:	Proprietary composite nanofiltration membrane
Membrane Type:	pH stable nanofiltration membrane
Molecular Weight Cut-Off (MWCO):	200 Dalton
Construction:	Spiral wound element
Major Applications:	Acid and caustic recovery, product concentration
Permeate Tube Material:	CPVC

SPECIFICATIONS

Part Number	Model	Rejection [%]		Permeate Flow gpd (m ³ /day)	Feed Spacer mil (mm)	Membrane Area ft ² (m ²)
		Glucose / Sucrose	NaCl			
0770061	MPS-34 2540 A2X	95 / 97	35	610 (2.3)	30 (0.8)	17.2 (1.6)
0770090	MPS-34 2540 A2Z	95 / 97	35	455 (1.7)	57 (1.4)	12.9 (1.2)
0770166	MPS-34 4040 A2X	95 / 97	35	2,240 (8.5)	30 (0.8)	60.3 (5.6)
0770092	MPS-34 4040 A2Z	95 / 97	35	1,520 (5.8)	57 (1.4)	43.0 (4.0)


*Test Conditions: RO water at 440 psi (30 bar), 86°F (30°C). Feed solution for rejection tests is 3% glucose / 3% sucrose or 5% NaCl.

OPERATING AND DESIGN INFORMATION*

Typical Operating Pressure:	220-510 psi (15-35 bar)
Maximum Temperature:	122°F (50°C)
Allowable pH - Continuous Operation:	0-14
Allowable pH - Clean-In-Place (CIP):	0-14
Maximum Pressure Drop Per Element:	10 psi (0.7 bar)
Maximum Pressure Drop Per Vessel (5 in Series):	50 psi (3.5 bar)

*Consult KSS Process Technology Group for specific applications.

NOMINAL DIMENSIONS

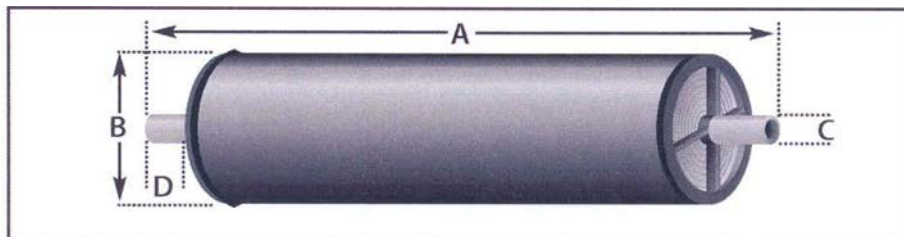

Model	A		B		C		D	
	inches	(mm)	inches	(mm)	inches	(mm)	inches	(mm)
MPS-34 2540	40.0	(1016)	2.4	(61)	0.75	(19.0)	1.0	(25.4)
MPS-34 4040	40.0	(1016)	3.9	(99)	0.75	(19.0)	1.0	(25.4)

TYPICAL PROCESS STREAMS

5% Hydrochloric acid	15% Acetic acid	3% Sodium Hydroxide
37% Hydrochloric acid	5% Nitric acid	20% Sodium Hydroxide
15% Sulfuric acid	15% Phosphoric acid	10% Potassium hydroxide

OPERATING GUIDELINES

Membrane Characteristics:

SelRO® Composite nanofiltration membrane in a spiral wound configuration, with superior pH and temperature stability.

Performance specifications shown on the front side of this document are nominal values.

Options:

- Feed channel spacers: 31 mil (X) and 57 mil (Z)

Operating Limits:

- **Operating Pressure:** Maximum operating pressure for SelRO® MPS-34 is 510 psi (35 bar). Actual operating pressure is dependent upon system flux rate, as well as feed, recovery and temperature conditions.
- **Permeate Pressure:** Maximum allowed permeate pressure is 3 psi (0.2 bar).
- **Differential Pressure:** Maximum differential pressure limit is 10 psi (0.7 bar) per element. Maximum differential pressure for any length vessel is 50 psi (3.5 bar).
- **Operating and Cleaning Temperature:** The operating and cleaning temperature is limited to 122°F (50°C) for the 2.5" and 4" elements due to the material of construction of the permeate tube for the small elements.
- **pH:** Allowable range for continuous operation is 0-14. When a stainless steel permeate tube is used, corrosive acids should be avoided.

Water Quality for Cleaning and Diafiltration:

- **Turbidity:** Maximum feed turbidity is 1 NTU.
- **Guidelines:** For more details please consult with KSS Process Technology Group.

Chlorine and Chemical Exposure:

- It is not recommended to expose the MPS-34 membrane to chlorine or other oxidants, as it may affect the membrane performance.
- Sodium metabisulfite (without catalysts such as cobalt) is the preferred chemical to eliminate free chlorine or other oxidizers in the feed.
- It is not recommended to expose the MPS-34 membrane to organic solvents, such as alcohol, acetone, etc.

Feed Flow Rate:

Maximum and minimum flow rate for the MPS-34 spiral module are as follows:

- 2540 Minimum 2 gpm (7.5 liter/min)
- 2540 Maximum 5 gpm (19 liter/min)
- 4040 Minimum 6 gpm (22 liter/min)
- 4040 Maximum 17 gpm (65 liter/min)

Actual feed flow rate is dependent upon system flux rate, feed characteristics, fouling tendency and system design:

Element Handling:

- **Recommended Cleaning Materials:** Depending on the nature of the feed, the following cleaning agents can be chosen:
 - 0.1-5% w/w sodium hydroxide at 122°F (50°C)
 - 0.2-1% w/w nitric or phosphoric acid at 122°F (50°C)
 - 0.1-0.5% w/w detergent mix KOCHKLEEN® KLD-III
 - 0.5% anionic surfactant (such as SDS) at 122°F (50°C)

Consult KSS regarding the use of other cleaning materials.

- **Lubricants:** For element installation, use only water or glycerin to lubricate seals. The use of petroleum or vegetable-based oils or solvents may damage the element and will void any warranty.
- **Storage Solution:** Should be made with:
 - **Short Term** (up to two weeks): 0.25 w/w sodium metabisulfite.
 - **Long Term:** 0.7% w/w benzalkonium chloride.
- Glycerin should not be used for storage of the MPS-34 membrane.
- The membrane module should not get dry. It should be stored in a sealed bag, in a temperature ranging from 36°F - 86°F (2°C - 30°C).

Service and Ongoing Technical Support:

Koch Separation Solutions (KSS) has an experienced staff of professionals available to assist end-users and OEM's for optimization of existing systems and support with the development of new applications. KSS also offers a complete line of KOCHKLEEN® membrane pretreatment, cleaning, and maintenance chemicals.

The information contained in this publication is believed to be accurate and reliable, but is not to be construed as implying any warranty or guarantee of performance. We assume no responsibility, obligation or liability for results obtained or damages incurred through the application of the information contained herein. Refer to Standard Terms and Conditions of Sale and Performance Warranty documentation for additional information

Koch Separation Solutions, Inc. 850 Main Street, Wilmington, MA 01887-3388
Main: +1-978-694-7000 • Fax: +1-978-657-5208 • Toll Free: +1-888-677-5624

For complete contact information and listing of our global locations, visit www.kochseparation.com

©2020 Koch Separation Solutions, Inc. All rights reserved worldwide. For related trademark information, visit www.kochseparation.com/legal.